


zerhunt

USER INSTRUCTIONS

BUBBLE MACHINE

Model No.: QB-806

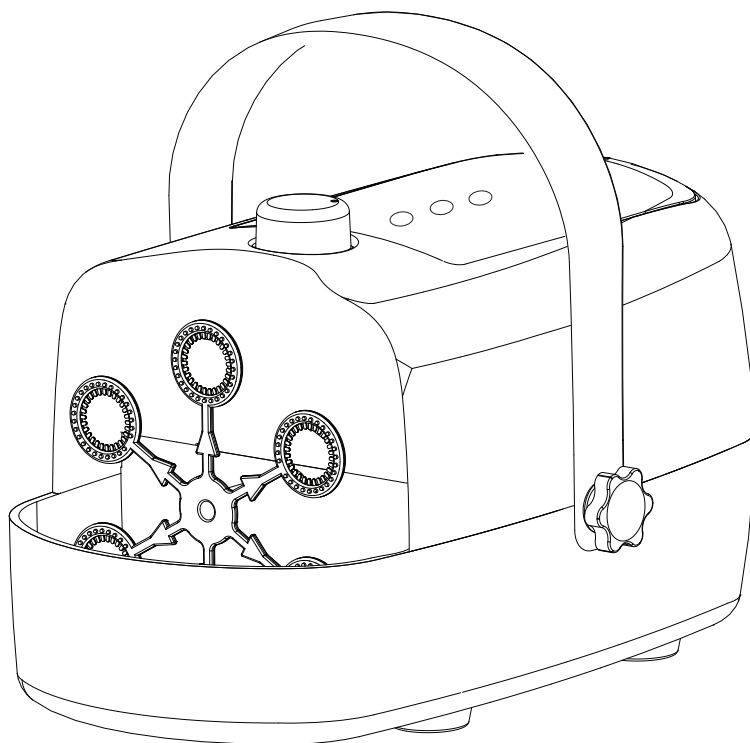

- **Warranty**

45 Days Money Back and One Year Guarantee
and Provide Friendly, Easy-to-Reach Support.

- **Contact us:**

Email: zerhunt@outlook.com


The bottom of the page features two overlapping wavy lines. The top line is a medium gray, and the bottom line is a darker gray, creating a modern, abstract footer design.

Introduction

Thank you for purchasing our Bubble Machine. This instruction manual contains important information about safety, usage, and disposal. Use the product as described and keep this manual for future reference. If you sell this bubble machine or pass it on, also give this manual to the new owner.

Product Description

1. Battery Compartment
2. Handle
3. ON/OFF/Speed Switch
4. Bubble Wand
5. Tank
6. DC-IN Jack

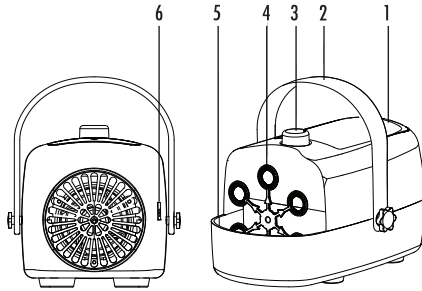

Safety Instructions

- This product is only authorized for domestic use and not for commercial or industrial purposes. It is only intended for applications described in these instructions.
- Children or dependents should not use, clean, or perform maintenance on the bubble machine without adult supervision.
- Only connect the bubble machine to a power outlet type as indicated in the "Specifications" section of this manual.
- To completely disconnect from power, remove the batteries and unplug the power adapter.
- Make sure the power cable is visible at all times to avoid stepping on or tripping over it.
- The machine should not be exposed to dripping or splashing water. If moisture, water, or any liquid gets inside the housing, immediately unplug from power and contact a qualified technician to check and repair it.
- Do not open the housing of the bubble machine. There are no

user-serviceable parts.

- Never leave the machine unattended when it is switched on or connected to power.
- Never aim the bubble machine at open flames.
- Do not aim the bubble machine directly at people as bubble liquid may leave permanent markings on clothing.
- Do not transport with liquid. If the machine gets wet, do not use until it is completely dry.
- Always keep batteries out of the reach of infants and young children to prevent the batteries from being swallowed. If swallowed, take immediate action and contact medical authorities for help.

Operation

Included Items

1 x Bubble Machine

1 x USB Power Cable(AC Adapter NOT Included)

1 x Handle

2 x tightening Screw with washer

1 x User Manual

Before using the bubble machine for the first time, check the package contents to ensure all parts are free of visible damage.

Inserting Batteries (Optional)

To insert the batteries, unscrew the screw on the battery compartment on the top of the machine and remove the compartment cover. Insert 4 C batteries (not included), paying attention to the correct polarity.

Handling and Operation

1. Place the bubble machine on a solid, flat surface and in a well-ventilated area.
2. Pour bubble liquid into the liquid reservoir. Always ensure the liquid level immerses at least one wand. Do not fill the reservoir over the noted maximum level.
3. If batteries have not been installed, plug the bubble machine into a grounded electrical outlet. If batteries are installed and the machine is also connected to an outlet, then outlet power will be used.
4. Turn the ON/OFF/Speed Switch clockwise to Speed Level 1.
5. Turn the Switch again for Speed Level 2.

Attention:

It is normal for the bubble machine to produce less bubbles when using battery power than when plugged in with the power adapter.

Note:

- Keep the air intake ports free from blockage.
- Do not use outdoors in the rain as this may lead to a short circuit.
- Do not leave unused liquid in the reservoir for an extended period. The liquid may thicken in the reservoir. Remove all liquid before storing or moving.
- If the bubble machine is to be mounted using a bracket, please note the machine should only be inclined to a maximum angle of 15 degrees.
- The bubble machine should not be used for more than 8 hours consecutively and is best operated at 40°-90°F (4°-32°C). Performance of the machine may be reduced in low temperatures.

Cleaning

1. Empty all bubble liquid from the machine.
2. Rinse and drain the reservoir using a little distilled water.
3. Add some warm distilled water to the maximum level.
4. After adding water, turn on the bubble machine and allow it to run in a well-ventilated area until all wands appear to be free of residue.
5. Drain the remaining water to complete cleaning.

Note:

- It is recommend to clean the bubble machine after every 40 hours of operation.
- Do not spin the fan using compressed air to avoid damage.
- Always remove the power adapter(Not included)from the socket before refilling the liquid or cleaning the bubble machine.

Storage

- If you do not intend to use the bubble machine immediately, it is best to unplug the power cord from the power socket, or remove the batteries.
- Once the machine has been disconnected from power, it is recommended to empty the reservoir and store the machine in a dust-free and dry place.

Specifications

Support 3 power supply modes: 5V2A plug in AC power supply, 4 X C batteries or 5V2A power bank.

Power Output: DC5V,2A

Power Consumption: Max 11.3W

Batteries: 4 x C size batteries (not included)

Support Power Bank: 5V, 2A

Spray Distance: 3-5m

Tank Capacity: max.320mL

Material: ABS

Dimension: 230*124*140mm

Weight: 700g

Disposal

Disposal of the Appliance



Under no circumstances should you dispose of the appliance in normal domestic waste. This product is subject to the provisions of European Directive 2012/19/EU.

Dispose of the appliance via an approved disposal company or your municipal waste facility. Please observe currently applicable regulations. Please contact your waste disposal center if you need any further information.



The appliance's packaging is made from environmentally friendly material and can be disposed of at your local recycling plant.